

Index By Article Number

Article numbers beginning with "M" start on page XII.

<u>Art #</u>	<u>Description</u>	<u>UOI</u>	<u>Page</u>	<u>Art #</u>	<u>Description</u>	<u>UOI</u>	<u>Page</u>
1557	Casement Fastener, Mortice	ea.	62	1979	Brass Pedestal	pr.	73
1557	Casement Fastener, Catch	ea.	62		for 2" Letter or Number		
1558	Hinge, 4" x 1-3/8"	pr.	91	1979	Brass Pedestal	pr.	73
1558	Hinge, 5.25" x 1.25"	pr.	91		for 3" Letter or Number		
1559	Lever Handle	pr.	1	1979	Brass Pedestal	pr.	73
1560	Lever Handle	pr.	2		for 4" Letter or Number		
1564	Lever Handle, 7.25" x 2", NK	pr.	2	1979	Brass Pedestal	pr.	73
1564	Lever Handle, 10" x 2", NK	pr.	2		for 6" Letter or Number		
1564	Lever Handle, 10" x 2", WK	pr.	2	1979	Comma, 2"	ea.	76
1564	Lever Handle, 10" x 2", P	pr.	2	1979	Comma, 3"	ea.	76
1566	Casement Fastener, LH, OP	ea.	62	1979	Comma, 4"	ea.	76
1566	Casement Fastener, RH, AP	ea.	62	1979	Comma, 6"	ea.	76
1567	Casement Fastener, LH, OP	ea.	62	1979	Full Stop, 2"	ea.	76
1567	Casement Fastener, RH, AP	ea.	62	1979	Full Stop, 3"	ea.	76
1568	Cabinet/Drawer Handle	ea.	89	1979	Full Stop, 4"	ea.	76
1569	Cabinet/Drawer Handle	ea.	88	1979	Full Stop, 6"	ea.	76
1578	Pull Handle	ea.	45	2151	Hinge Front	pr.	36
1579	Pull Handle	ea.	45	2155	Pull Handle	ea.	45
1735	Parliament Hinge, 3"	pr.	28	2156	Push Plate	ea.	49
1735	Parliament Hinge, 3.5"	pr.	28	2157	Pull Handle	ea.	45
1735	Parliament Hinge, 4"	pr.	28	2163	Pull Handle	ea.	46
1735	Parliament Hinge, 4.5"	pr.	28	2164	Pull Handle	ea.	46
1735	Parliament Hinge, 5"	pr.	28	2166	Pull Handle, 7.5"	ea.	46
1735	Parliament Hinge, 6"	pr.	28	2166	Pull Handle, 10"	ea.	46
1753	Electric Bell Push	ea.	65	2167	Pull Handle	ea.	46
1754	Electric Bell Push	ea.	65	2168	Pull Handle	ea.	46
1755	Electric Bell Push	ea.	65	2169	Pull Handle, LH or RH	ea.	46
1756	Electric Bell Push	ea.	65	2170	Pull Handle, 6", LH or RH	ea.	47
1757	Electric Bell Push	ea.	66	2170	Pull Handle, 10.5", LH or RH	ea.	47
1758	Electric Bell Push	ea.	66	2172	Pull Handle	ea.	47
1759	Electric Bell Push	ea.	66	2173	Pull Handle	ea.	47
1760	Electric Bell Push	ea.	66	2175	Door Grille	ea.	S2
1761	Electric Bell Push	ea.	66	2176	Door Grille, 6"	ea.	27
1777	Bell Crank	ea.	67	2176	Door Grille, 12"	ea.	27
1778	Bell Crank	ea.	67	2434	Lever Handle, 7.5", NK	pr.	2
1783	Bell Crank	ea.	67	2434	Lever Handle, 7.5", WK	pr.	2
1820	Hinge, 16"	pr.	33	2434	Lever Handle, 7.5", P	pr.	2
1820	Hinge, 18"	pr.	33	2434-1	Lever Handle, 5-5/8"	pr.	2
1820	Hinge, 20"	pr.	33	2437	Lever Handle, NK	pr.	2
1891	Postal Knocker	ea.	56	2437	Lever Handle, WK	pr.	2
1944	Knob, 1"	ea.	88	2437	Lever Handle, P	pr.	2
1963	Postal Knocker	ea.	56	2438	Lever Handle, NK	pr.	2
1979	Numeral, 2"	ea.	73	2438	Lever Handle, WK	pr.	2
1979	Letter, 2"	ea.	73	2438	Lever Handle, P	pr.	2
1979	Numeral, 3"	ea.	73	2439	Lever Handle, 4"	pr.	3
1979	Letter, 3"	ea.	73	2439	Lever Handle, 6", NK	pr.	3
1979	Numeral, 4"	ea.	73	2439	Lever Handle, 6", WK	pr.	3
1979	Letter, 4"	ea.	73	2439	Lever Handle, 6", P	pr.	3
1979	Numeral, 6"	ea.	73	2440	Lever Handle, NK	pr.	3
1979	Letter, 6"	ea.	73	2440	Lever Handle, WK	pr.	3
				2440	Lever Handle, P	pr.	3
				2442	Lever Handle, NK	pr.	3