

ELECTRICAL COVER PLATES

M17

Five Toggle Switch



p. 72

ACCESS KEYS

M18

Stainless steel access key used to open emergency button on locks equipped with the M30 Privacy Turn.

p. 100



M19


TURN ROSES

p. 100

Turn Rose

Installed below levers and knobs with small plates to accept the M30 turn of the M333 and M334 Privacy Locks. Used with:

- Levers: 879, 1559, 1560, 2443, and 2471  
Knobs: 808, 1069, 1089, 1122, 1203, 1206, 1205-square position, 1207-square position, 1208-square position, 1209, 1550, 1551, 3056-2 $\frac{1}{4}$ ", and 3056-2  $\frac{3}{4}$ "

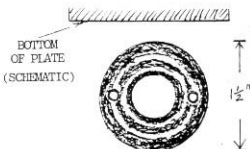

Each M30 Thumb Turn requires 2 ea M19 Turn Roses. If no emergency access is desired, only 1 ea Turn Rose is needed.