


TURN ROSES

M20

Turn rose installed below the plate to accept the M30 (p.100) p. 100
Turn of the M333 and M334 Privacy Locks. Used with Knobs:
1205, 1207, and 1208 in their diagonal position.

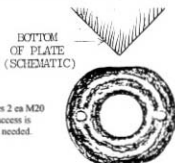

Each M30 Thumb Turn requires 2 ea M20
Turn Roses. If no emergency access is
desired, only 1 ea Turn Rose is needed.

DOOR STOPS

M21

Base mounted door stop. Long projection. Textured by hand. All p.81
patterns differ slightly from each other. Stem of stop has
hexagonal section to facilitate fastening.



WALL STOPS

M22

Compact design stop for areas where large stop (M164, p.82) is p.81
not suitable. Textured by hand. All patterns vary slightly from
each other. Supplied fasteners totally concealed behind rubber
insert. Expansion anchor for hollow walls included.



All contents copyright ©1992 by Maguire Iron Corporation, Carson City, Nevada 89701, USA. No part of this catalogue may be reproduced in any form, including electronically, without the express written consent of Maguire Iron Corporation, except single pages as part of submittals to clients by architects, designers or dealers. Violations have been and will be prosecuted.