


LOCKS


- M401 Sliding Door Passage Set. Textured by hand. All patterns vary slightly from each other. With edge pull and side pulls. Installed into a single notch cut-out. Instructions included. Supplied with mounting screws in matching finish. p.104A

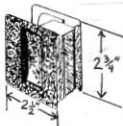

- M460P Schlage B460 Series Deadbolts with DB powdercoat finish applied to forend (front), strike plate and exposed screws. p.104A

M461P

M462P



M460P

2 3/8" Backset

M461P

1 3/4" Backset

M462P

2 3/4" Backset

- M821 Longer Driver Bar for 460 Series Schlage Deadbolts for doors up to 3" thick. For heavy thicknesses doors trim rings are discarded and hole accomodating cylinder is drilled smaller. Consult us for doors thicker than 3". p.104A



- M822 Longer 10/32 Mounting Screws for 460 Series Schlage Deadbolts for doors up to 3" thick. Two ea (1 pr) required. For heavy thicknesses doors trim rings are discarded and hole accomodating cylinder is drilled smaller. Consult us for doors thicker than 3". p.104A

